

LABELMATE LLC

C-100 / C-200

Label Counters for use with CAT-2 Label Rewinders



C-100 Label Counter

- Digital Circuitry for Accuracy and Repeatability
- Preset Count—Up or Down
- Stops Rewinder when Count is reached.

Remove all parts from shipping container and verify contents.

Package Contents

- C-100 (6"-width") or C-200 (10"-width) Counter Unit
- AC-DC Adapter (Power Supply Module)
- User Manual (this document)

Retain the Shipping Container and Packaging for Storage and Transport.

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter Modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorized person. Use of any unauthorized accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact Labelmate at (877) 833-7149 toll-free inside the USA or +1 (702) 435-8535 outside the USA, for the location of the nearest authorized service center or questions regarding warranty coverage. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorized to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

12A Sunset Way, Henderson, NV 89014 USA
(702) 435-8535 FAX (702) 435-8536
Toll-Free (877) 833-7149 in USA!
info@labelmate.com

LABELMATE EUROPE
Brussels, Belgium

www.labelmate.com



WARNING

**This product is for indoor use only.
Not for use in wet locations.**



Affix the label web to the label rewind core on the Label Rewinder.

The Counter will count the number of labels passing through the sensor air gap.

If you observe erratic counting, clean the Optical Sensor with isopropyl alcohol.

PC-1 PRESET COUNTER SET-UP

Set the AC/DC Adaptor "VOLT CH. Switch" to "12" and plug it into a suitable AC Power Outlet. Plug the Cord on the AC/DC Adaptor into the Power Input Jack on the bottom of the Counter Display Module.

Plug the Control Cable (with 3.5mm plugs at each end) between the Output Jack on the bottom of the Counter Display Module and the "EXTERNAL HALT CONTROL" jack on the CAT-2 Label Rewinder.

The Counter is pre-programmed as a Preset Count-down Counter. Press each of the 6-digits for the count desired. This is the number of labels you wish to pass through the Label Sensor before the Counter issues a "HALT" command to the CAT-2 Label Rewinder.

Pull a short strip of labels back and forth through the Label Sensor Gap and observe the count on the Counter decreasing. When the preset number of labels is reached, the PC-1 Counter will issue a Halt Command for the CAT-2 Label Rewinder to stop. Pressing "RESET" will reset the count and restart the CAT-2.

See the included detailed manual on the Veeder-Root Pre-set Counter itself for many other Counter options, such as Count Up, Scaling for number of labels across and others.

COUNTER USE

Place the C-100 or C-200 Label Counter so that it is perpendicular to the label web.

Observe the Paper Path Label on the Counter: Feed the label web under the metal Rotating Paper Guide and over the Nylon Fixed Paper Guide.

Adjust the position of the rings on the Rotating and Fixed Paper Guides to the width of your label web. Only finger tighten the screws. The labels must pass through the black sensor slot between the round Paper Guides.

MAINTENANCE

The C-200 and C-100 Label Counters require no maintenance.

INTERNAL CIRCUIT PROTECTION

The C-200 and C-100 Label Counters have an internal device for circuit protection. There are no user serviceable parts inside. In the event of operational problems, please contact LABELMATE for assistance.