

## Label Dispensers

### LD-100-RS, LD-200-RS & RS-SS



LD-100-RS-SS Label Dispenser

- Switched HI-LOW Speed
- Adjustable Label Sensor
- For Opaque Labels

Remove all parts from shipping container and verify contents.

#### Package Contents

- LD-100-RS or LD-200-RS Label Dispenser (-SS Stainless Steel optional).
- AC-DC Adapter (Power Supply Module)
- User Manual (this document)

#### IMPORTANT NOTES:

Not for transparent labels. Keep the Stripper Bar and Web Guide Bars clean. Use isopropyl alcohol or "Goo-Gone"™ to clean adhesive residue from parts. Adhesive buildup can cause malfunction and damage to your Unit. Do not use any chemicals on the Sensor or the Sensor Eye. Use only a cloth or paper towel moistened with water.

Retain the Shipping Container and Packaging for Storage and Transport.

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE**

#### Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter Modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorized person. Use of any unauthorized accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact Labelmate at (877) 833-7149 toll-free inside the USA or +1 (702) 435-8535 outside the USA, for the location of the nearest authorized service center or questions regarding warranty coverage. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorized to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

## LABELMATE LLC

12A Sunset Way, Henderson, NV 89014 USA  
(702) 435-8535 FAX (702) 435-8536  
Toll-Free (877) 833-7149 in USA!  
info@labelmate.com

LABELMATE EUROPE  
Brussels, Belgium




## WARNING

This product is for indoor use only.  
Not for use in wet locations.



### SET-UP AND USE

1. Make sure the Power Switch is in the center "OFF" position.
2. Set your Label Dispenser in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
3. Connect the Power Supply Module to a suitable AC power source.
4. Place your roll of labels on the Label Roll Holder & slide the Roll Edge Guide(s) to the width of your label web. The Label Web can be positioned from side to side as required to ensure that the label lines up with the reflective Sensor.
5. Thread the label web between the Stripper Bar and the round Guide Rod directly above it. See the Label Threading Path illustration.
6. Pull the label web UNDER the round Web Guide and slide the width adjusters to the width of the web.
7. Loop the web UNDER the Wire Bail on the Take-Up Shaft as shown in the illustration.
8. Slightly loosen the Label Sensor Lock Knob, until you can just rotate the Sensor. Point the sensor up so it is pointing at the bottom of the Stripper Bar. Place the Power Switch in the "LOW" position. Slowly rotate the Sensor down until the label begins to advance. Continue to rotate the Sensor slowly until the desired label length is protruding. Retighten the Lock Knob securely.
9. Use the "HIGH" or "LOW" Switch setting to select the desired speed.
10. **IMPORTANT – Pull labels UP when removing them.** If excess dust or dirt accumulates on the Label Sensor Eye the Dispenser may not sense labels correctly. Use a cloth or paper towel dampened with water to gently clean the Label Sensor.
11. **Do not use any chemicals on the sensor.**
12. Optional Flanges for the inside and outside of the label roll are available. These Flanges are recommended for narrow or loosely wound labels that may have a tendency to fall off the roll. Order **FLANGES-LD**. Set of two Flanges.

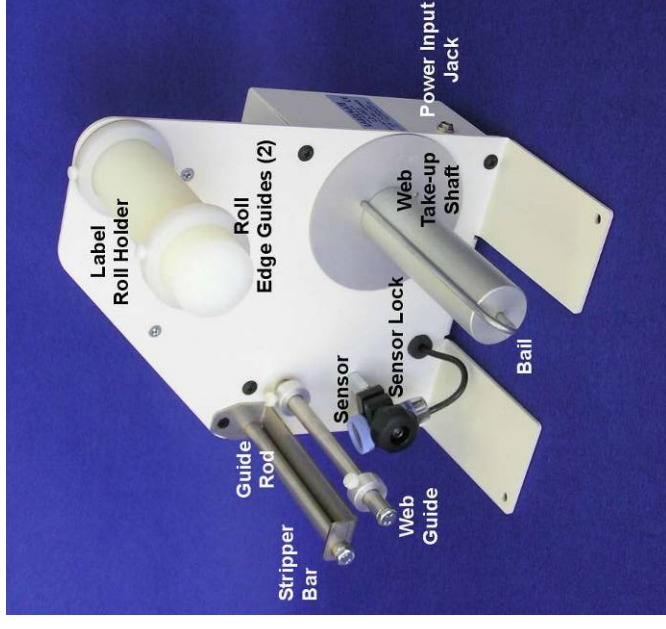

Label Threading Path

**OPTIONAL LABEL COUNTER:** The optional Label Counter will add one count to the displayed number for each label that is dispensed. This Option is available only factory installed in new Units.