

LABELMATE LLC

LD-100T & LD-200T

Powered Label Dispenser


Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (<i>mechanical parts only</i>) Label Slitters (<i>mechanical parts only</i>) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter Modules Encoders <i>Any products not specified above.</i>

Product Limited Warranty
All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorized person. Use of any unauthorized accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact Labelmate at (877) 833-7149 toll-free inside the USA or +1 (702) 435-8535 outside the USA, for the location of the nearest authorized service center or questions regarding warranty coverage. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorized to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

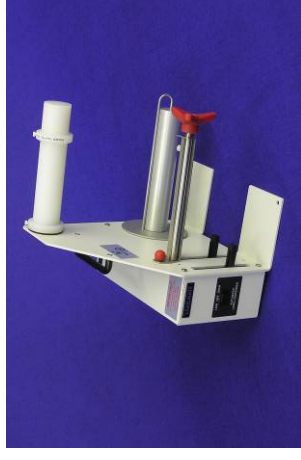

LD-100T Label Dispenser

- High—Low Speed Select
- Dispense Transparent or Opaque Labels

Remove all parts from shipping container and verify contents.

Package Contents

- User Manual (this document)
- Label Dispenser Unit
- AC Transformer
- Hook-shaped metal Bail

Retain the Shipping Container and Packaging for Storage and Transport.

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •

LABELMATE LLC

12A Sunset Way, Henderson, NV 89014 USA
(702) 435-8535 FAX (702) 435-8536
Toll-Free (877) 833-7149 in USA!
info@labelmate.com

LABELMATE EUROPE
Brussels, Belgium

www.labelmate.com





WARNING

**This product is for indoor use only.
Not for use in wet locations.**



accumulates on the sensor tips the Dispenser may not sense labels correctly. Use a cloth or paper towel dampened with water to gently clean the inside edges of the Label Sensor. **Do not use any chemicals on the sensor.**

12. Optional Flanges for the inside and outside of the label roll are available (Order **FLANGES-LD**. Set of two Flanges). These Flanges are recommended for narrow or loosely wound labels that may have a tendency to fall off the roll.

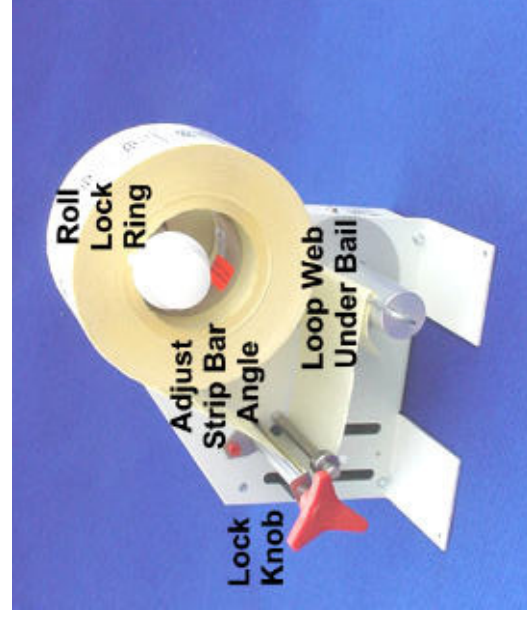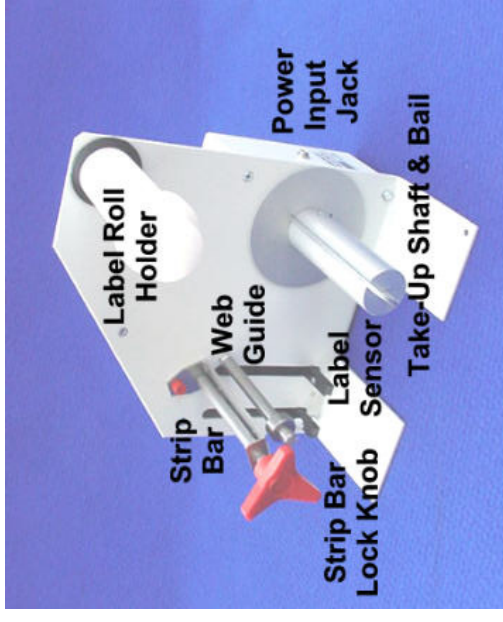

VERY IMPORTANT:

Keep Label Sensor tips clean. Wipe with a soft cloth occasionally. Be careful not to damage the sensor arms. Use no chemicals on the Sensor.

Keep Tape Stripper Bar and Web Guide Bars clean. Use isopropyl alcohol or “Goo-Gone” to clean adhesive residue from parts. Adhesive buildup can cause malfunction and damage to your Unit.

SET-UP AND USE

1. Make sure the Power Switch is in the “OFF” position.
2. Set your LD-100-T or LD-200-T in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
3. Connect the AC Transformer to a suitable AC power source.
4. Place your roll of labels on the Label Roll Holder & slide the Roll Lock Ring onto the Roll Holder to the width of your label web.
5. Thread the label web between the Strip Bar and the Lock Knob Shaft directly above it. See the threading diagram on the Unit. There should be about 1- to 2-mm between the inside edge of the label web and the Strip Bar frame.
6. Pull the label web under (or over) the round Web Guide and slide the width adjuster to the width of the web.
7. Loop the web UNDER the Wire Bail on the Take-Up Shaft as shown in the illustration.
8. Use “HIGH” or “LOW” Switch setting according to desired speed.
9. The Label Sensor can be adjusted up or down as desired depending on where you want the leading edge of the label to stop. Push in slightly on the Label Sensor while sliding to make adjustment easier.
10. **The angle of the Strip Bar must be adjusted if needed according to the length of the label and the angle that it exits the Strip Bar.** This is helpful if the label is curling. Loosen the Lock Knob and position the Strip Bar with the small red button. Retighten the Lock Knob.
11. **IMPORTANT – Pull labels UP when removing them, NOT TO THE SIDE.** The optical Label Sensor must be kept clean. If dust or dirt