

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

| Warranty Period | Products Covered |
|-----------------|--|
| 5 years | Label Rewinders Label Unwinders |
| 3 years | Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms |
| 1 year | Power Supply Modules Counter Modules Encoders <i>Any products not specified above.</i> |

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorized person. Use of any unauthorized accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact Labelmate at (877) 833-7149 toll-free inside the USA or +1 (702) 435-8535 outside the USA, for the location of the nearest authorized service center or questions regarding warranty coverage. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorized to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

12A Sunset Way, Henderson, NV 89014 USA
(702) 435-8535 FAX (702) 435-8536
Toll-Free (877) 833-7149 in USA!
info@labelmate.com

LABELMATE EUROPE
Brussels, Belgium

www.labelmate.com

LABELMATE LLC

MC-11

MINI-CAT Label Rewinder with Adjustable Core Holder

- Switched Bi-Directional Control
- Constant Adjustable Torque™ "CAT" technology
- Adjustable Speed up to 15" (380-mm) per second



MC-11

MC-11 with optional Adjustable Paper Guide

Remove all parts from shipping container and verify contents.

Package Contents


- MC-11 Rewinder Unit with Adjustable Core Holder
- AC-DC Adapter (Power Supply Module)
- User Manual (this document)

Retain the Shipping Container and Packaging for Storage and Transport.

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE** •


PRODUCT SPECIFICATIONS

- Max. Label Width:** 4.5 inches (11.5cm)
Max. Label Roll Weight: 8.5 lbs. (3.9 kg)
Max. Label Roll Size: Up to 8.5 inches (215 cm)
Speed: Adjustable up to 15-ips (38 cm/sec)
Start/Stop: On/Off/On directional switch
Power Supply: Voltage selectable AC/DC Adapter
120VAC 60Hz
UL & CSA Listed (230VAC 50Hz available)

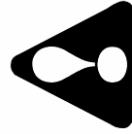

WARNING

**This product is for indoor use only.
Not for use in wet locations.**

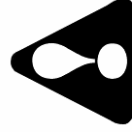

INITIAL SET-UP

- Place the MC-11 so that the three (3) Rewind Fingers are perpendicular to the web of the labels to be rewound. The MC-11 is bi-directional, and can be operated in either direction.
- Verify that the (ON-OFF/Direction) Switch on the rear of the MC-11 is in the OFF (0) position.
- Insert the Power Supply Cord into the Power Jack on the rear of the MC-11.
- Set the VOLT CHANGE SW slide switch on the AC/DC Adapter to "4.5" as an initial setting.
- Plug the AC/DC Adapter into a suitable 120-vac 60Hz electrical outlet. The AC/DC Adapter can be left plugged in at all times.
- The Rewinder has a combination Power and Direction (ON-OFF/Direction) Switch on the rear panel. See the photo below. The Center Position of the Switch is "OFF" (0). To make the Rewinder run to the right (looking from the rear of the Rewinder), press the Power / Direction Switch in the direction of the right arrow. To make the Rewinder run to the left, press the Power / Direction Switch in the direction of the left arrow.



REWINDING LABELS

Rewind labels onto any core 1" - 4" diameter and up to 4.5" wide.

- Loosen the three (3) black Lock Levers on the back of the Core Holder Flange Plate.
- Grasp the front Flange Plate with one hand and the rear Flange Plate with the other. Notice the rear Flange Plate has convenient cutouts for your thumb.
- Rotate the Plates in opposite directions until the three (3) Core Fingers move to the center next to each other.
- Slide an empty cardboard core ONLY PART WAY over the Fingers.
- Now rotate the Flange plates in the opposite direction to expand the Fingers against the inside of the cardboard core. While you hold the Flanges so the Fingers are tight against the inside of the Core, move one of the Locking Levers to the LOCK position. NOTE: If one or more of the Locking Levers is up against the Hub and won't lock, pull up on the Lever (away from the Flange Plate) and reposition it.
- Now move the other two (2) Locking Levers to the LOCK position.
- Slide the cardboard core all the way up against the Flange Plate.
- Pull the label web to the cardboard core and use a piece of tape to secure the label web.
- Adjust the position of the MC-11 if necessary so it is square with the label path.
- If you are using the APG-MC Adjustable Paper Guide, move the Arm into position to guide the outer edge of the labels and lock it into place.
- Place the MC-11 (ON-OFF/Direction) Switch to the ON position in the desired direction of operation, left or right.
- Start the printer and observe that the labels are being rewound correctly. You can adjust the (VOLT CHANGE SW) Slide Switch on the AC/DC Adapter to provide more or less rewind force as desired.
- When rewinding is finished, place the MC-11 (ON-OFF/Direction) Switch to the OFF (0) position.
- If the APG-MC Adjustable Paper Guide is in use, unlock and move the Arm out of the way.
- Slide the cardboard core and the wound labels off the MC-11. You do not need to loosen the three (3) Locking Levers unless you want to use a different diameter core.

UNWIND FEATURE

To use the MC-11 as an Unwinder, place the VOLT CHANGE SW to the "1.5" position and place the (On/Off/On Directional) Switch to provide resistance to the roll of labels you wish to unwind.

MAINTENANCE

The MC-11 Rewinder requires no maintenance.