

MAINTENANCE:

Your LD-100S requires no maintenance.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com

www.labelmate.com

© LABELMATE – User_LD-100S – 04/07

LD-100S

Label Dispenser for Very Small or Odd-shaped Labels

- *Variable Speed Control*
- *Press-to-Run Foot Switch*
- *Works with labels as small as 5mm*



Remove all parts from the shipping container and verify contents.

Package Contents

- *User Manual (this document)*
- *Label Dispenser Unit*
- *Foot Switch*
- *Power Supply Module*

Retain the Shipping Container and Packaging for Storage and Transport

- ***KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE*** •

SPECIFICATIONS:

Max. Label Roll Weight:	4.5Kg (8.8Lb)
Max. Label Roll Size:	220mm (8.7") diameter
Power Supply:	Input: 220-240VAC – 50-60Hz. Output: 11VAC – 2.5A



WARNING!

**This Product is for indoor use only.
Not for use in wet locations.**

SET-UP AND USE:

1. Set the LD-100S in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
2. Place the Foot Switch as desired and plug the cord into the Foot Switch Jack on the front of the Unit. The Unit will operate without the Switch.
3. Make sure the Power Switch is in the "OFF" position.
4. Connect the Power Supply Module to a suitable AC power source.
5. Place your roll of labels on the Label Roll Holder & slide the plastic Roll Lock Ring on the Roll Holder to the width of your label web.
6. Thread the label web between the Strip Bar and the Round Rod directly above it. There should be about 1- to 2-mm between the inside edge of the label web and the Strip Bar frame.
7. Pull the label web back under the Web Guide and slide the width adjuster to the width of the web.
8. Pull the web up over the Round Rod directly in front of the Strip Bar and around the front of the Web Roller.
9. Now pull the web under the Take-Up Shaft and loop the web UNDER the Wire Bail on the Take-Up Shaft as shown in the illustration.
10. Place the Power Switch in the "ON" position.
11. When the Foot Switch is depressed, labels will advance.

12. Adjust the Speed Control as desired.

13. Optional Label Flanges are available. Order LD-FLANGES. Recommended for narrow or loosely wound labels that may have a tendency to telescope or fall off the label core.

A vacuum handling tool might help pick up very small labels in some cases, but often labels are very sticky and may be pushed back onto the label web by the tool. If you want to try it, a simple "Handi-Vac"® tool is available from Virtual Industries, Inc. www.virtual-ii.com

