

## MAINTENANCE:

Keep the Label Sensor and Stripper Bar clean, following instructions page 1.

### Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

## LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96

[brussels@labelmate.com](mailto:brussels@labelmate.com)

[www.labelmate.com](http://www.labelmate.com)

# LD-100-U / LD-200-U

## Powered Label Dispenser



- *High-Low Speed Select*
- *Adjustable Label Sensor*

**Remove all parts from the shipping container and verify contents.**

### Package Contents

- *User Manual (this document)*
- *Label Dispenser Unit*
- *Power Supply Module*

### VERY IMPORTANT:

- **Keep Label Sensor Eye clean. Wipe with a soft cloth occasionally. Be careful not to damage the sensor. Do not use any chemical on the Sensor.**
- **Keep Tape Stripper Bar and Web Guide Bars clean. Use isopropyl alcohol or "Goo-Gone"™ to clean adhesive residue from parts. Adhesive build-up can cause malfunction and damage to your unit.**

**Retain the Shipping Container and Packaging for Storage and Transport**

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE •**

## SPECIFICATIONS:

<b>Max. Label Roll Weight:</b>	4.5Kg (8.8Lb)
<b>Max. Label Roll Size:</b>	220mm (8.7") diameter – 300mm (12") with LD-DE
<b>Power Supply:</b>	Input: 220-240VAC – 50-60Hz. Output: 11VAC – 2.5A




### **WARNING!**

**This Product is for indoor use only.  
Not for use in wet locations.**


## SET-UP AND USE:

1. Make sure the Power Switch is in the "OFF" position.
2. Set your LD-100-U or LD-200-U in place and plug the cord from the Power Supply Module into the Power Input Jack on the rear of the Unit.
3. Connect the Power Supply Module to a suitable power source.
4. Place your roll of labels on the Label Roll Holder & slide the Roll Edge Guide(s) to the width of your label web. The Label Web can be positioned from side to side as required to ensure that the label lines up with the reflective Sensor.
5. Thread the label web between the Stripper Bar and the round Guide Rod directly above it. See the Label Threading Path illustration.
6. Pull the label web under (or over) the round Web Guide and slide the width adjusters to the width of the web.
7. Loop the web UNDER the Wire Bail on the Take-Up Shaft as shown in the illustration.
8. Slightly loosen the Label Sensor Lock Knob, until you can just rotate the Sensor. Point the sensor up so it is pointing at the bottom of the Stripper Bar. Place the Power Switch in the "LOW" position. Slowly rotate the Sensor down until the label begins to advance. Continue to rotate the Sensor slowly until the desired label length is protruding. Retighten the Lock Knob securely.
9. **When dispensing transparent labels**, it is recommended to place the sensor as close to the labels as possible.

10. Use "HIGH" or "LOW" Switch setting to select the desired speed.
11. **IMPORTANT – Pull labels UP when removing them.** If excess dust or dirt accumulates on the Label Sensor Eye the Dispenser may not sense labels correctly. Use a cloth or paper towel dampened with water to gently clean the Label Sensor.
12. **Do not use any chemicals on the sensor.**
13. Optional Flanges for the inside and outside of the label roll are available (Order **LD-FLANGES**. Set of two Flanges). These Flanges are recommended for narrow or loosely wound labels that may have a tendency to fall off the roll.

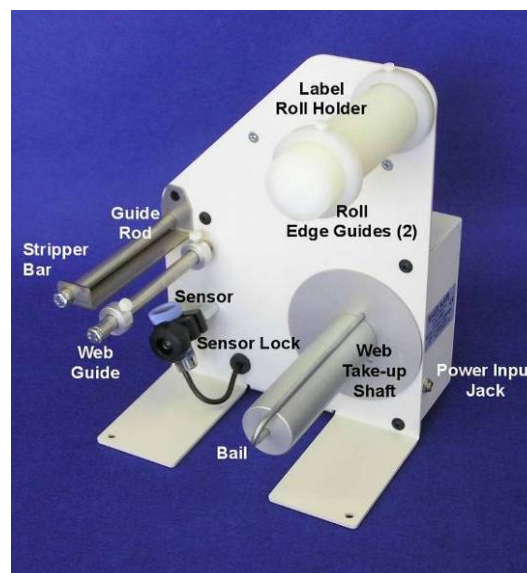

**Label Threading Path**

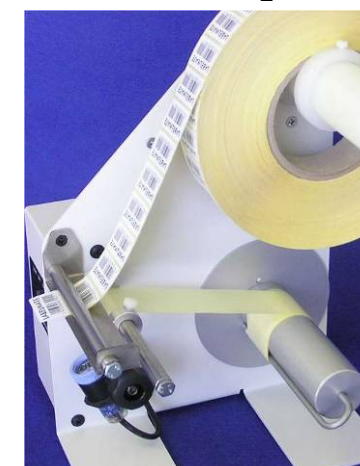

**OPTIONAL LABEL COUNTER:** The optional Label Counter will add one count to the displayed number for each label that is dispensed. This Option is available only factory installed in new Units.

When the LD-100-U/LD-200-U is first turned on, it will display a count of "1" or it will display the number from the previous count. You can reset the Label Counter to zero ("0") by pressing the "R" Reset Button.



**FOR YOUR SAFETY:**  
**Switch off device before removing the take-up shaft.**