

MAINTENANCE:

Your UCAT-S requires no maintenance.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM

TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com

www.labelmate.com

© LABELMATE – User_UCAT-S – 02/07

UCAT-S

Economy Label Unwinder with Fixed Braking



- ***Low-cost economy Unwinder***
- ***Limited Fixed Braking***
- ***Non-Powered***

Remove all parts from the shipping container and verify contents.

Package Contents

- ***User Manual (this document)***
- ***UCAT-S Unit***
- ***Plastic bag with three (3) vanes and 6 screws***
- ***One 300mm (12") Plastic Inner Flange Plate***

Retain the Shipping Container and Packaging for Storage and Transport

- ***KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE***

SPECIFICATIONS:

Max. Label Roll Weight: 7Kg (15.4Lb) for Standard
Max. Label Roll Size: 300mm (12") diameter

SET-UP:

1. Slide the Flange Plate onto the brass Shaft
2. Install the three (3) metal Vanes onto the Shaft. The curved side of each Vane faces the Shaft. Secure each Vane with 2 slotted screws provided.
3. Position the Plastic Flange Plate even with the inside end of the Shaft so there is clearance between the Flange and the Chassis.
4. Tighten the screw in the Hub until it is snug.
5. **CAUTION: AVOID ACCIDENTS. THE UCAT-S WEIGHS OVER 6.5KG (14Lb), SO CHOOSE ONLY A STURDY SURFACE ON WHICH TO SET THE UNIT.**

Your UCAT-S is now ready for use.



WARNING!

**This Product is for indoor use only.
Not for use in wet locations.**

LABEL UNWINDING :

The UCAT-S is bi-directional. It can unwind labels in either direction.

1. Slide the roll of labels to be unwound / slitted onto the shaft of the UCAT-S and all the way up against the Plastic Flange Plate.
2. Thread the labels into the printer / slitter as required
3. Begin the printing operation and observe that the labels are feeding correctly into your printer / slitter. If necessary, adjust the position of the UCAT-S so the alignment with the printer / sliter is appropriate to correctly feed the labels.