

MAINTENANCE:

Your RRC-250 requires no maintenance.

Product Limited Warranty

All Labelmate Products are warranted to the original end-user customer to be free from defects in materials and workmanship. If it is determined by Labelmate that a product has failed under the terms of this warranty, the product will be repaired or replaced at no charge to the customer. Labelmate reserves all rights to determination of coverage and liability under this warranty. The warranty period for all new Labelmate products is outlined below:

Warranty Period	Products Covered
5 years	Label Rewinders Label Unwinders
3 years	Label Counters (mechanical parts only) Label Slitters (mechanical parts only) Label Dispensers Printer Mechanisms
1 year	Power Supply Modules Counter modules Encoders Any products not specified above.

The warranty period for all products starts on the date purchased by the original end-user customer. Warranty coverage is not transferable with ownership and will terminate immediately upon rental, resale or any other change in ownership. This warranty does not cover repair to any product which is damaged, has been modified, is missing parts, or has been opened or repaired by any unauthorised person. Use of any unauthorised accessory or attachment will void coverage. Purchase documentation should be retained for coverage verification.

In the event your product requires service, please contact the distributor you bought the product from. The customer assumes responsibility for all cost and risk incurred in transport for service.

Labelmate makes no other warranty of any kind expressed or implied, or to suitability or fitness for a particular purpose. No other person, agent or reseller is authorised to give any warranties on behalf of Labelmate. Any obligation to warranty other than that specifically addressed above is hereby disclaimed.

LABELMATE LLC

69 AVENUE ALPHONSE XIII, 1180 BRUSSELS, BELGIUM


TEL: +322.375.69.60 – FAX: +322.375.38.96

brussels@labelmate.com

www.labelmate.com

RRC-250

Reel-to-Reel Counter

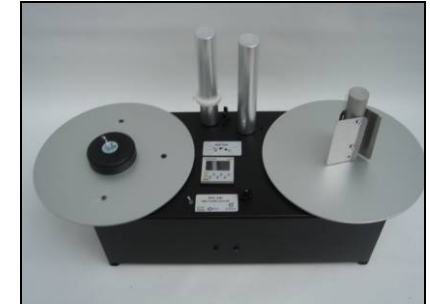

- **Variable Speed Control**
- **6-Digit Digital Pre-set Counter**
- **250mm (10") Roll Diameter**

Remove all parts from the shipping container and verify contents.

Package Contents

- *User Manual (this document)*
- *RRC-250 Unit*
- *Power Supply Module*
- *Separate User Manual for Counter Unit*

Retain the Shipping Container and Packaging for Storage and Transport

- **KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE**

SPECIFICATIONS:

Max. Label Roll Weight:	6Kg (13.2Lb)
Max. Label Roll Size:	250mm (10") diameter
Power Supply:	Input: 220-240VAC – 50-60Hz. Output: 24VDC – 4.17A.
Speed:	Min. 65cm/sec with 76mm take-up roll diameter.

SET-UP:

1. Plug the Power Supply Output Cable to the Power Jack on the Rear Panel of the RRC-250. Plug the Power Supply into a suitable AC Power Mains Outlet. Place the Power Switch on the rear of the RRC-250 to the "ON / 1" position. Observe that numbers are displayed on the Counter.

See the separate User Manual for the Counter Modules itself for other operations.

2. The Counter is pre-programmed as a Preset Count-Up Counter. If you want to use the preset function, introduce the number of labels with the blue push button on the counter. If you do not want to use preset, set the value to "0".
3. When the preset number of labels is reached, the RRC-250 will stop. Pressing "R" on the counter will reset the count and restart the RRC-250.



WARNING!

**This Product is for indoor use only.
Not for use in wet locations.**

OPERATION:

1. Place the "STOP / RUN" Switch in the STOP Position.
2. Place your Roll of Labels on the Roll Holder at the left of the RRC-350. The Take-Up Spindle on the right rotates in a counter-clockwise direction. Note that your rewind can be "Wind-In" or "Wind-Out" according to which way you place the Label Roll on the Roll Holder, right-side-up or upside-down. There is a screw on the unwind Core Holder Hub. Tightening this Screw will increase the braking effect. Unscrew the Butterfly Screw for less tension or if the Core of the unwind roll is too tight on the unwind Hub.
3. The 2 plastic rings on the paper guides need to be used only if the unwind roll is unevenly wound to begin with. Setting the rings at the proper height will correct the unevenness of the roll on the rewind side.
4. The machine will stop when out of paper. To re-start, load paper, and set the Stop/Run Switch to STOP. Re-set the counter if necessary. Start by switching to "RUN".
5. Place an empty label Core (not included) over the Take-Up Spindle and secure the Label Web using a piece of tape.
6. Enter the desired Label Count via the Push Buttons on the Counter. If you do not use preset, set the value to "0".

IMPORTANT!

It is recommended to use the machine at its maximum speed.
Keep unwind plate clean of particles and glue.